

## MON300 Apartment Monitor Unit User Guide



### GENERAL OPERATION

When a caller calls from the entry station, an image will appear on your screen with a polyphonic ring tone. Lift the handset and speak clearly. Press # 1 to unlatch the door and release the security for your level. Place the handset back on its cradle.

### CHECKING FOR VISITORS

To view the location of your visitor or to check whether your visitor has arrived, press # 2 to view your building's front door stations (eg. main entry or lift lobby). Continue to press # 2 to view each front door station once. Replace the handset back in its cradle once viewing is complete. Please note that you are only able to use this function once between calls.

### MISSED CALLS

To view images of missed calls, press # 4. To scroll through stored images press # 2 (to scroll forward) and # 3 (to scroll back). To save images and exit, press #4. To delete all images, hold on #1 (while on image mode) for three seconds and all images will be deleted.

### CONTACTING THE SECURITY GATEHOUSE

To call the Security Gatehouse, leave the handset in the cradle and press # 3. Wait for the Security Gatehouse to reply and lift the handset and speak clearly. Place the handset back in the cradle to end the call.

### MUTING YOUR RINGTONE

To mute your ringtone, press # 4 without lifting the handset. The entry unit will display "no answer" after the prescribed dialling period.